

# How to change 32A fuse for MTI's furnace

**Problem:**

The green indicating light (power) is off and red one (open circuit) is on.


**Possibility:**

Fuse 32A of main circuit is broken by over current or short circuit inside the furnace.


1. Open the back cover of the furnace, and check if there is short circuit.



2. Find out the main circuit where the fuse locates and then, uninstall the fuse.

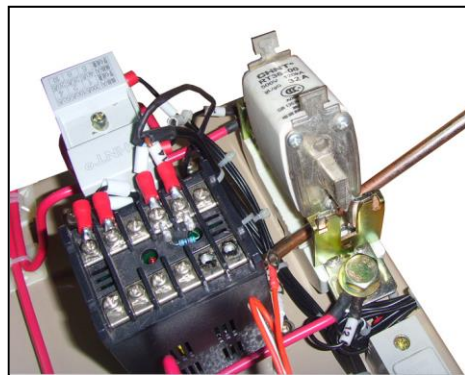

3. Change a new fuse.

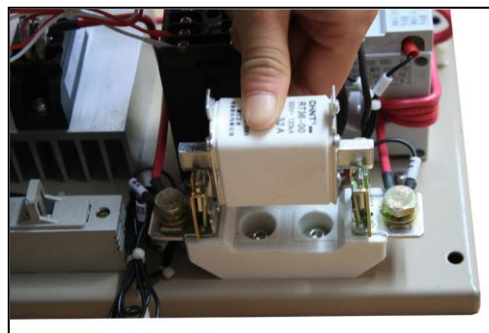

4. Power on the furnace and check if the furnace runs normally.